

ExpoDisc White and Warm Balance Filters

Konica Minolta Maxxum 7D Custom WB Procedure

Up to three custom white balance settings can be stored in the camera.

1. Install the ExpoDisc and set the camera to Manual Focus mode.
2. Allow the camera to set an automatic exposure using the “P”, “S” or “A” modes, or set the correct manual exposure in “M” mode.
3. Set the White-Balance Dial to the custom position.
4. Press the White-Balance Button (in the center of the dial) to open the Custom White Balance setting screen.
5. Use the Controller Dials or Left/Right Controller Keys and select the “SET” option. When the “SET” option is selected, the red custom setup indicator is displayed on the LCD monitor.
6. Aim the camera in the appropriate direction for the given lighting condition and press the shutter release button. See the ExpoDisc Instruction manual for more information on where to aim the camera.
7. On the Register-Selection Screen use the Controller Dials or Left/Right Controller Keys to select the destination register in which to store the custom white-balance setting; any previous setting is replaced.
8. Press the White-Balance Button (in the center of the White-Balance Dial) to complete the operation.
9. A calibration error may occur under extremely bright light sources, especially with flash units. If an error occurs, a message appears on the monitor and the White-Balance Indicator is yellow. Highlight the Return Button and press the center of the controller. Adjust the exposure settings and recalibrate.
10. Remove the ExpoDisc, return camera to auto focus mode (if desired), and start shooting.